
CW-628-A Cold · Hot Water Dispenser

Operation Manual
(Digital Operation Panel for Temperature)

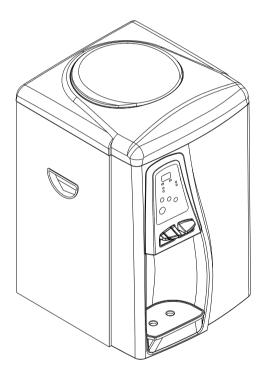


Contents	Page
Preface / Parts	1
Piping Installation ———	2
Operation Method ———	3
Safety Reminder —	4
Cleaning & Maintenance	5

Please read these instructions completely before operating this unit

Preface / Parts


Before using this machine, we advise you to read this manual thoroughly .

Please follow the instructions to ensure proper operation and the lasting of the machine .

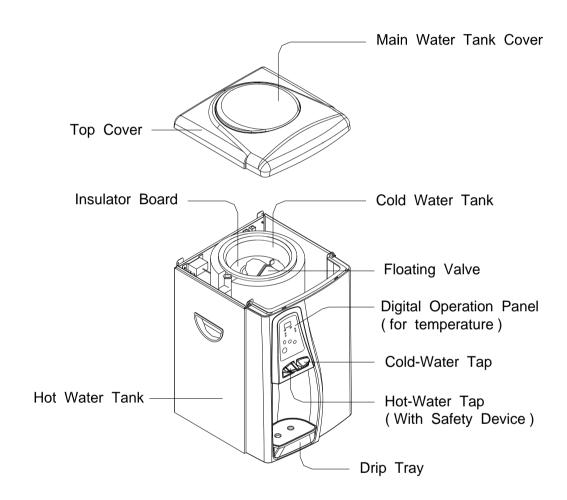


Piping Installation


1. Dismantle original water tap, add tri-way socket and inlet ball valve . see drawing (A)

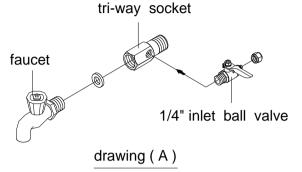



2.Connect 1/4" PE water pipe between inlet ball valve and inlet connector , see drawing (B)

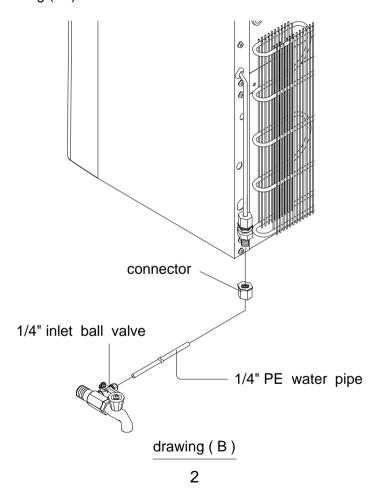

Operation Method

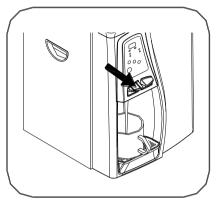

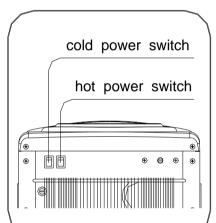

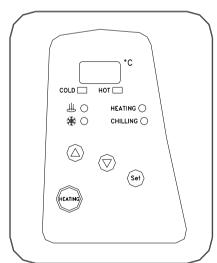

1. After piping system is done, be sure the Hot and Cold Power Switch are off before water-in.

After water full of tank, drain out the 1stround of water (1st round water is not good for drink). Wait for 2nd round of water, press cold water tap and hot water tap to drain a little bit of water out (it is to make sure water full of tank). Then, it is ready to turn on Cold Power Switch. 1 minute later, turn on Hot Power Switch.


The machine is ready for server.

- 2. Now, Hot lens will go on and digital display show the temperature of hot water. Please push " Set " button for section of hot or cold.


 When you need to adjust the hot temperature, please push " Set " button and select hot temperature. Hold on the Set button for 3 seconds until digutal flash. Now you could adjust the temperature (from 80~100°C).

 After set up is done, push " Set " button again.
- 3. When you need to adjust the cold temperature, please push "Set" button and select cold temperature. Hold on the Set button for 3 seconds until digutal flash. Now you could adjust the temperature (from $0{\sim}5^{\circ}{\rm C}$). After set up is done, push "Set" button again.
- 4. Push " Heating " button , the hot water could reach to 100°C .

Safety Reminder

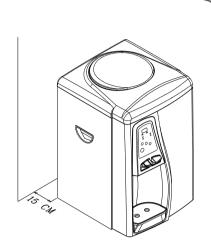


Leave a space no less than 15cm between the wall and dispenser.

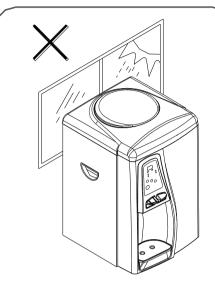

Keep the machine away from sunlight, heat, and wetness.




Do not put dispenser on a place where the kids can reach easily .

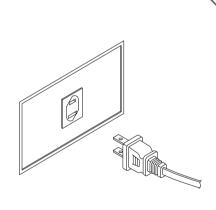


Be sure to use single outlet socket with correct power voltage. Plug the power cord directly into electrical socket.


Cleaning & Maintenance

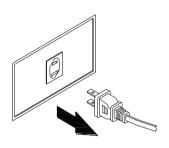

 Please make sure the plug has been pulled out from outlet before cleaning the water dispenser.

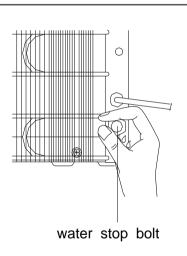

3. Pull out water stop bolt, which can completely drain out water in cold-water and hot-water tanks.

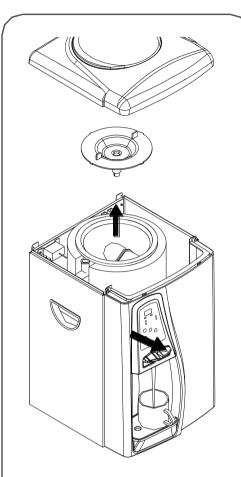

2. Use screwdriver to remove the screws on the top cover , bottom cover, left and right plate . After removing top cover, get off the insulator board, press cold -water and hot-water taps, completely drain out all water . It is ready for clean .

Caution: Please do not let water seep to interior of the unit to avoid damage.